

DIGITEMP

Pipe-mounted Temperatur Sensor

ANF 99

Description

The DIGITEMP ANF 99 pipe-mounted temperatur sensor measures temperatures on pipes. The sensor is mounted onto the pipe by a metal strap with heat-conducting paste applied to the sensors head. The sensor is directly connected to the EIB bus and does not require a separate power supply.

The temperatur sensor consists of the sensor itself and the application software.

Sensor control is effected and parameters are set with ETS (EIB-TOOL-SOFTWARE).

Technical Data

max. group addresses	13
power supply	24V DC via EIB
auxiliary power supply	not necessary

temperature range: -55...+125°C
resolution 0.08°C

casing:
protection class IP 65
dimensions 65 x 50 x 37 mm
white plastic similar to RAL9001

outlets:

- temperature
- upper/lower (switching) threshold A
- upper/lower (switching) threshold B
- sensor status
- heating and cooling operation
- constant action control for heating and cooling operation

Configuration

The factory settings of the sensor do not feature any device or group addresses. The functions required are assigned when setting the parameters. During the planning phase with ETS, objects which are not assigned are not displayed either.

important:

The bus coupling unit (BCU 2.1) used in the sensor requires the following to be installed before first-time use of the device:

for ETS 2.0 V1.1

- Service Release B
- dummy device BCU21.vd1
- product data base 08/2001 or later

for ETS 2.0 V1.2

- product data base 08/2001 or later

The application programm must always be fully downloaded to the device, never partially. Partial download of the programm may lead to malfunctions.

Installation

The device is mounted directly onto a pipe with a metal strap which is supplied with the sensor. The strap length is sufficient for pipes of up to 2" diameters.

Heat-conducting paste should be applied to the sensors head at the back of the device.

The spring-loaded sensor head is automatically pressed against the pipe to ensure proper contact.

Warnings

Health and safety regulations have to be compiled with!

A faulty device must be returned immediately to Lingg & Janke OHG!

Lingg & Janke OHG
Zeppelinstraße 30
78315 RADOLFZELL
GERMANY

technical support:
tel. (+49) 7732 - 94557-71
www.lingg-janke.de

DIGITEMP

Pipe-mounted Temperatur Sensor

ANF 99

Description

The DIGITEMP ANF 99 pipe-mounted temperatur sensor measures temperatures on pipes. The sensor is mounted onto the pipe by a metal strap with heat-conducting paste applied to the sensors head. The sensor is directly connected to the EIB bus and does not require a separate power supply.

The temperatur sensor consists of the sensor itself and the application software.

Sensor control is effected and parameters are set with ETS (EIB-TOOL-SOFTWARE).

Technical Data

max. group addresses	13
power supply	24V DC via EIB
auxiliary power supply	not necessary

temperature range: -55...+125°C
resolution 0.08°C

casing:
protection class IP 65
dimensions 65 x 50 x 37 mm
white plastic similar to RAL9001

outlets:

- temperature
- upper/lower (switching) threshold A
- upper/lower (switching) threshold B
- sensor status
- heating and cooling operation
- constant action control for heating and cooling operation

Configuration

The factory settings of the sensor do not feature any device or group addresses. The functions required are assigned when setting the parameters. During the planning phase with ETS, objects which are not assigned are not displayed either.

important:

The bus coupling unit (BCU 2.1) used in the sensor requires the following to be installed before first-time use of the device:

for ETS 2.0 V1.1

- Service Release B
- dummy device BCU21.vd1
- product data base 08/2001 or later

for ETS 2.0 V1.2

- product data base 08/2001 or later

The application programm must always be fully downloaded to the device, never partially. Partial download of the programm may lead to malfunctions.

Installation

The device is mounted directly onto a pipe with a metal strap which is supplied with the sensor. The strap length is sufficient for pipes of up to 2" diameters.

Heat-conducting paste should be applied to the sensors head at the back of the device.

The spring-loaded sensor head is automatically pressed against the pipe to ensure proper contact.

Warnings

Health and safety regulations have to be compiled with!

A faulty device must be returned immediately to Lingg & Janke OHG!

Lingg & Janke OHG
Zeppelinstraße 30
78315 RADOLFZELL
GERMANY

technical support:
tel. (+49) 7732 - 94557-71
www.lingg-janke.de