


Quick-start guide WLAN - EIB Kit

default settings:

	user	password
router IP-address: 192.168.0.1	admin	---
NK1 IP-adresse: 192.168.0.2	user	Nk1

The router is preset as a DHCP server. The range of client addressing is 192.168.0.100 - 200

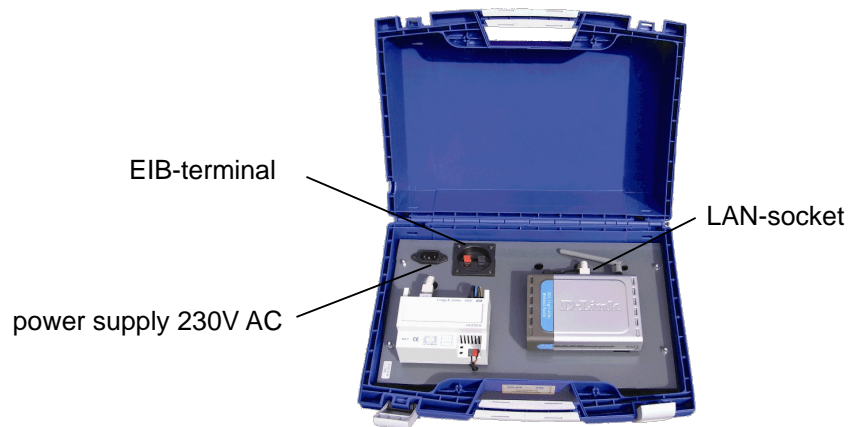


- The LAN and WAN (DSL) socket is located on the back of the router. Please refer to the router manual to identify the correct socket
- After connecting the cables to the relevant sockets, the kit is ready for use.
- The IP-addresses of the router and the NK1 can be adjusted to the requirements of the network in use. Please refer to the documentation of the relevant devices.

Quick-start guide WLAN - EIB Kit

default settings:

	user	password
router IP-address: 192.168.0.1	admin	---
NK1 IP-adresse: 192.168.0.2	user	Nk1

The router is preset as a DHCP server. The range of client addressing is 192.168.0.100 - 200

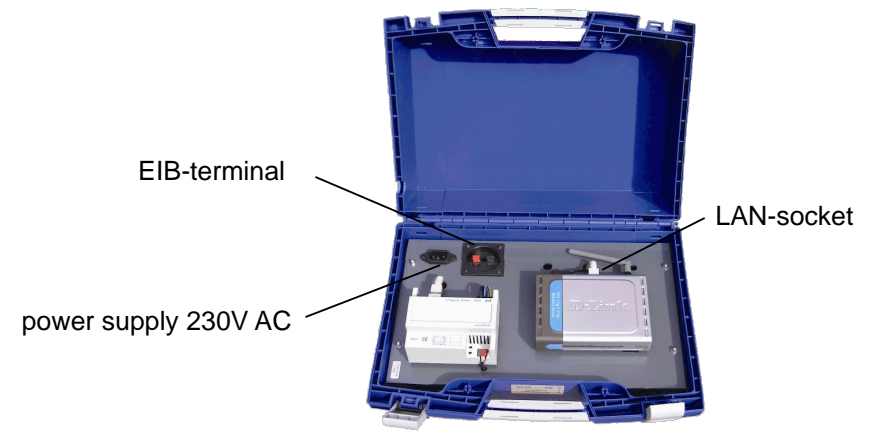

- The LAN and WAN (DSL) socket is located on the back of the router. Please refer to the router manual to identify the correct socket
- After connecting the cables to the relevant sockets, the kit is ready for use.
- The IP-addresses of the router and the NK1 can be adjusted to the requirements of the network in use. Please refer to the documentation of the relevant devices.